## **LTECH** LED Wireless Driver



- RF 2.4GHz wireless signal, no need signal cable.
- Dimming, CT, RGB, RGBW LED lights can be controlled.
- Support V series remote controlling.
- Support DX/UX series touch panel controlling.
- Support WiFi-104 gateway controlling.

# FC CE RoHS (warranty 5 years)

System Diagram



R4-5A/R4-CC

#### Specification

| Model               | R4-5A                                   | R4-CC                                      |
|---------------------|---|--|
| Wireless signal     | RF 2.4GHz                               |  |
| Input voltage       | 5-24Vdc                                 | 12-48Vdc                                   |
| Output voltage      | 5-24Vdc                                 | 3-46Vdc                                    |
| Current load        | 5A × 4CH Max. 20A                       | CC 350/700/1050mA ×4CH                     |
| Output power        | (0~25W120W) × 4CH Max. 480W             | (1.05W~48.3W)×4CH Max. 193.2W              |
| Dimming range       | 0~100%, LED start at 0.1% possible.     |  |
| Protection          | Over current / Short circuit protection | Over temperature / Open circuit protection |
| Working temperature | -30°C~55°C                              |  |
| Product size        | L175×W44×H30(mm)                        |  |
| Package size        | L178×W48×H33(mm)                        |  |
| Weight(G.W.)        | 150g                                    | 165g                                       |

#### **Product Size**

Unit: mm










## **Terminal Description**

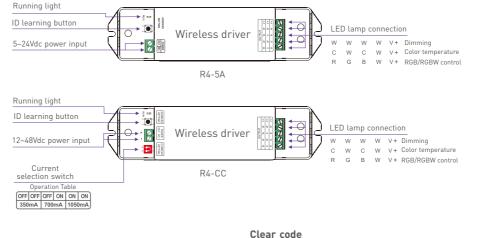

#### Match Code



Long press "ID learning button" on driver for 5 seconds, If the lamps flicker several times, deactivate the matching successfully.



WiFi-104 gateway.
I) Short press "ID learning button" on driver, the lamps changed from flicker to keep on, please complete next step within 10s.
2. Match up with V series remote: Press any key (single zone remote) or zone key (multi-zone remote). Batch up with DX series panel: Press any key (single zone panel) or zone key (multi-zone panel). Match up with UX series panel: Press any key (single zone panel) or zone key (multi-zone panel). Match up with 104 gateway: Select zone number on App, then touch the color slide for 2-3 seconds.
3. If the lamp flicker several times, match successfully.

Match code with V series remote, DX series touch panel, UX series touch panel,



### Wiring Diagram

