



HAA2866 - erratum



HAA2866 – ERRATUM

This document corrects the user manual available in the HAA2866 package and on the website.


Set timing mode for output relay

(Page 23 in user manual)

Example of key combination to set the timing mode for an output relay.

- The following key combination sets 20 seconds for location 51.


51 20 #



location seconds confirmation

- The following key combination sets 10 minutes (600 seconds) seconds for location 52.

52 600 #



location seconds confirmation