




 

 


 

 
 
## KAR-1500 BLACK




[www.facebook.com/denverelectronics](http://www.facebook.com/denverelectronics)

Before operating this vehicle, read all the instructions for safe assembly and operations. User's manual can guide you through the functions and usage of Balance scooter. Before using this scooter, familiarize yourself with how to operate, so that you can keep the scooter in the best condition possible.




1 × 	1 × 	2 × 
A 2 × (M6*45MM) 	B 2 × (M6*13MM) 	C 2 × (M6*15MM) 
D 2 × 	E 4 × 	F 4 × 
G 2 × 	H 1 × 	


1

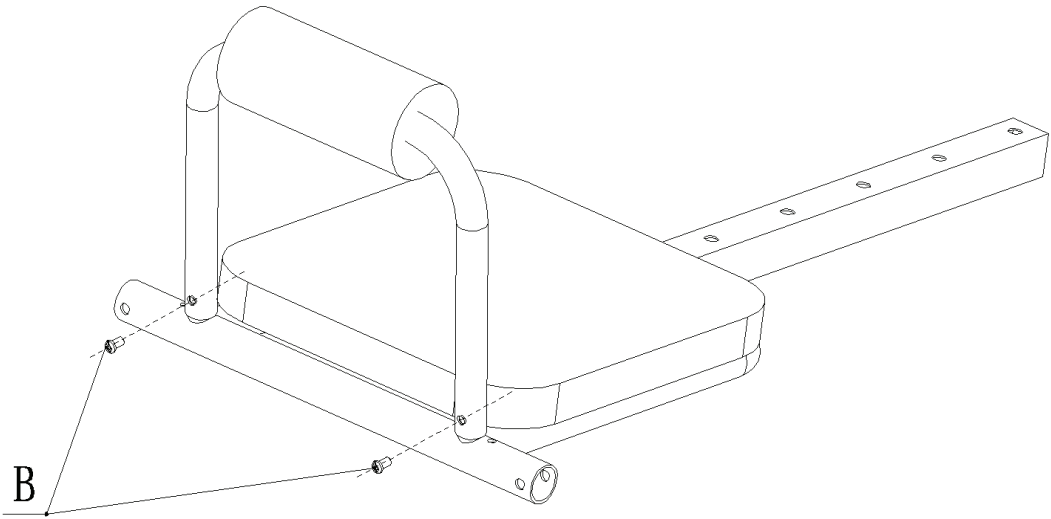


2

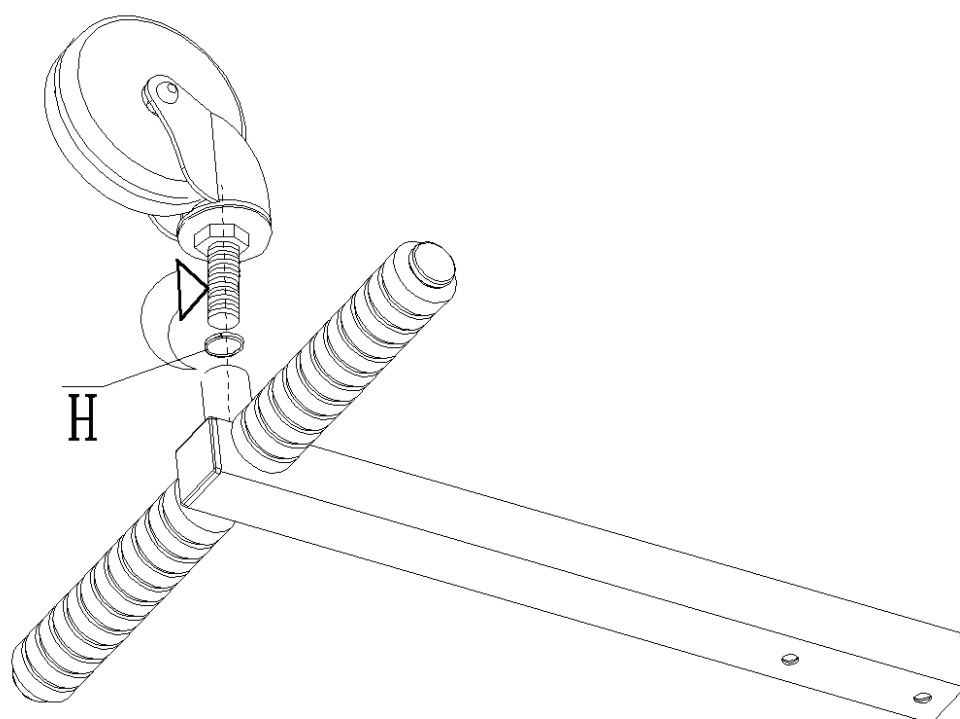

3

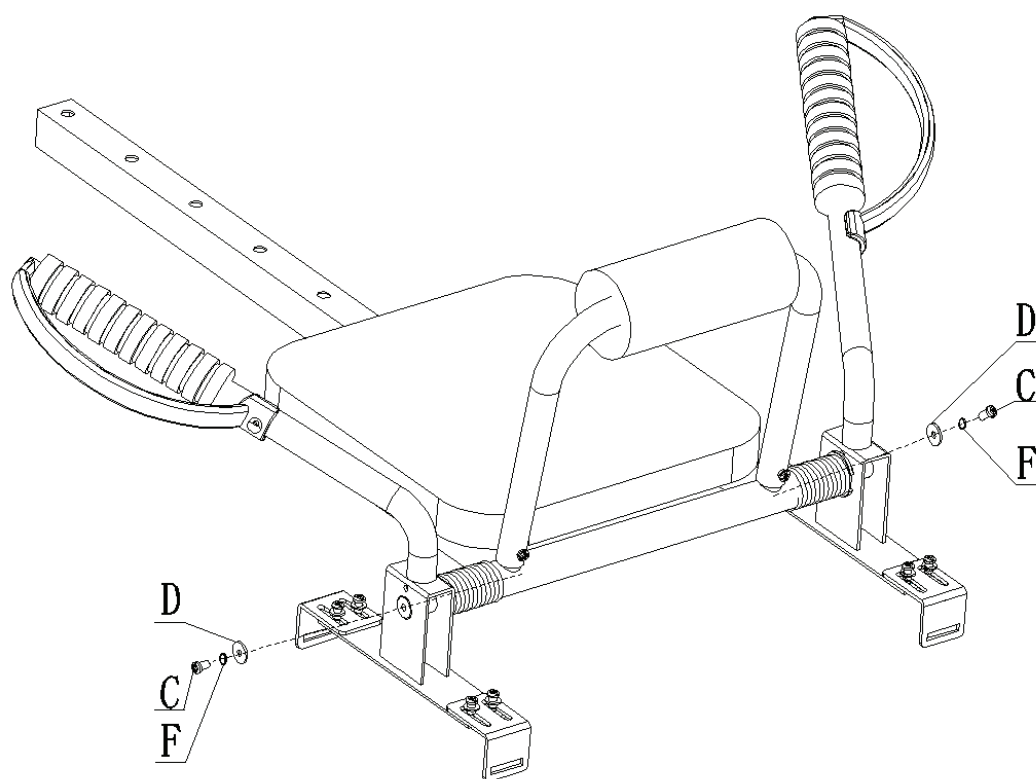

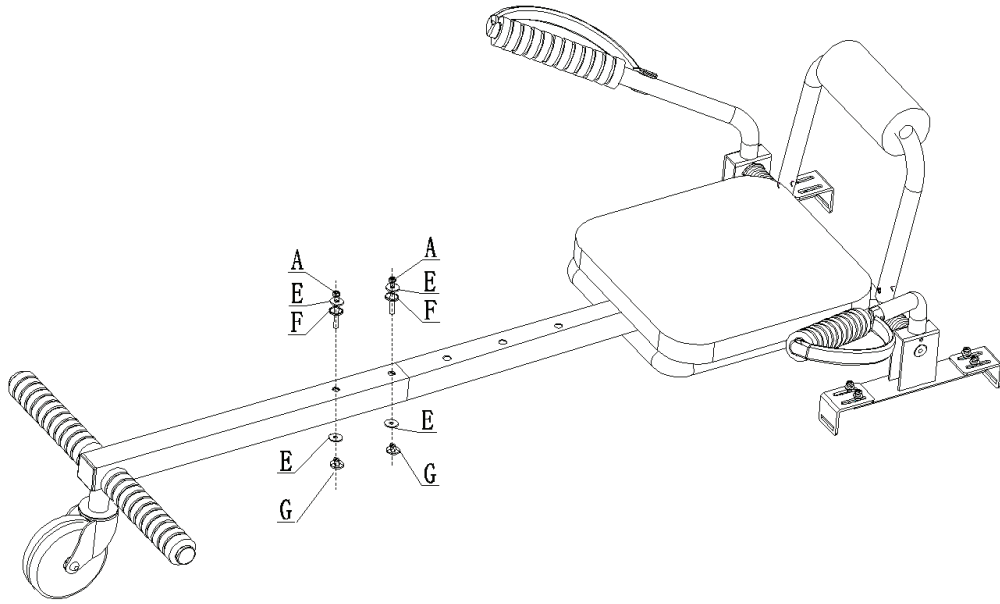

## Safety Instructions

As with all means of transport, there is a safety risk. Therefore, you have to understand the safety precautions about the product very well and be careful when driving:

1. Do not accelerate and/or brake very quickly; or go from one to the other constantly.
2. If there is a risk of falling, please react to personal safety first.

## Caution

- ① Please wear safety helmet, gloves, knee pads, and other necessities to protect yourself when driving.
- ② Please go to a quiet open area to practice.
- ③ Should not be driven on uneven surfaces, such as soil road, rock road.
- ④ Should not be on inclines/declines over 30 degrees
- ⑤ Not recommend for children under 12 years.
- ⑥ Only for use on closed/private areas.

## Daily maintenance

- Wipe the shell of kart with soft cloth.
- Store the kart indoors. Put it in a place with a dry and suitable environment.
- Do not store the product in sunlight or near open fire.

To operate:

Use a strap to attach the cart to the scooter

1



2



3



4



5



6




Sit on seat, feet on foot rest. Turn on the power switch.

\*Do not push the handles up or down whilst your feet are on the ground.



Move forward: Push the handles down on both sides at the same time.

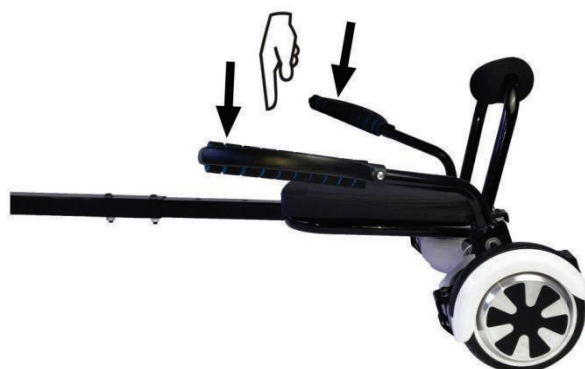


Move back or brake



Turn left: Push the right handle down.



Turn right: Push left handle down.

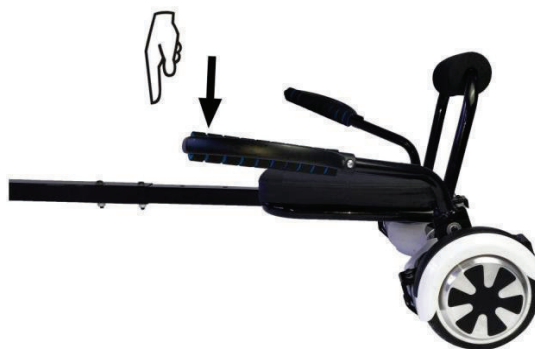

\*Turn the board off before getting off the seat.

Scooters have differing settings. You may need to get off the kart and loosen the straps and lift the kart slightly off the board before you are able to turn it off.

Be very careful when getting off the kart when the board is still on. Moving the handles will make the kart move.

ALL RIGHTS RESERVED, COPYRIGHT DENVER ELECTRONICS A/S

DENVER®  
www.denver-electronics.com



Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen below. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Imported by:  
DENVER ELECTRONICS A/S  
Omega 5A, Soefften  
DK-8382 Hinnerup  
Denmark

[www.facebook.com/denverelectronics](https://www.facebook.com/denverelectronics)

