

DENVER DSC-5000

Important – Please read!

The battery type in the DV-10306 / DSC-5000MK2 E-scooter is not fully charged from production line. And when left unused they can slowly discharge by themselves.

This can lead to slow charge if the batteries are fully discharged, but this is done to avoid damage to the battery cells.

If you experience that you cannot turn on your scooter, and it doesn't seem to charge (the charger will light up green instantly), then please do one of following.

1. Leave the charger in for 9-10 hours. This will make sure the battery will be fully charged again (it can take 3-4 hours before it starts normal charging).
2. Ride the E-scooter manually without turning it on. Use your legs to give speed, just 100 meters or so, and then connect the charger. The engine in the front wheel will this way help to activate the charging function and it will charge normally (fully charge takes 2-3 hours if using this way)

