



Direct control

Button	Action
Location	Modify sensor or zone. The previous/next room (zone) can be selected with the “↑” or “↓” button as long as the LED of these buttons blinks.
Mode	Temporarily switch between antifreeze - , night ☾, day ☼ or comfort ☀ <i>Remark: a long press will deactivate the temporary mode (sleep timer)</i>
‘↑’ ‘↓’	Display and/or modify desired temperature
Menu	Short press: call abridged menu Long press: call full menu

Menu control

Navigate through the menu with the “↑” and “↓” buttons.

Select an item with the “→” button.

Confirm a setting with the “→” button or clear the setting with the “←” button.

Quit the menu at any time without saving the modifications with the “☺” button.

Short menu

Press the “Menu” button shortly to call the menu.

Sleep timer¹
Temp. settings
Comfort
Day temp
Night temp
To main menu
Alarm clock set
Clock set
Exit

Extended menu

Hold the “Menu” button pressed to call the extended menu. Enter the PIN code if necessary.

Program
Sensor Settings
Operating mode
Button lock
Sleep timer
Low temp. alarm
High temp. alarm
Anti-freeze temp
Upper heat temp
Lower cool temp
Upper cool temp
Hysteresis
Temp difference
Unjam pump
Unjam valve
Local program
Zone number ²
Diff. sensor ²
Sensor cal. ²
Change name ³
To main menu
Configuration
Language
Temp. Read-out
Master clock
Global alarm clk
Battery backup
Change PIN code
Firmware version
Address ²
Link wake-up ²
Link go-to-bed ²
Scan sensors ²
To main menu
Display
Contrast
Backlight
To main menu
Statistics²
Min temp 16.0°
Max temp 23.0°
- 0m/5m
☾ 0m/5m
* 8m/1h10m
☀ 10m/1h15m
Σ 18m/2h35m
To main menu
Exit

Remarks:

1. This menu is only accessible if the temporary mode (sleep timer) is activated.
2. This menu is not accessible if a zone or “all rooms” are selected.
3. This menu is not accessible if “all rooms” are selected.