


Button 1
Button 2
Button 3
Button 4
Button 5
Button 6
Button common

Brown	Blue
Red	Blue
Orange	Blue
Yellow	Blue
Green	Blue
Blue	Blue
Black	Blue

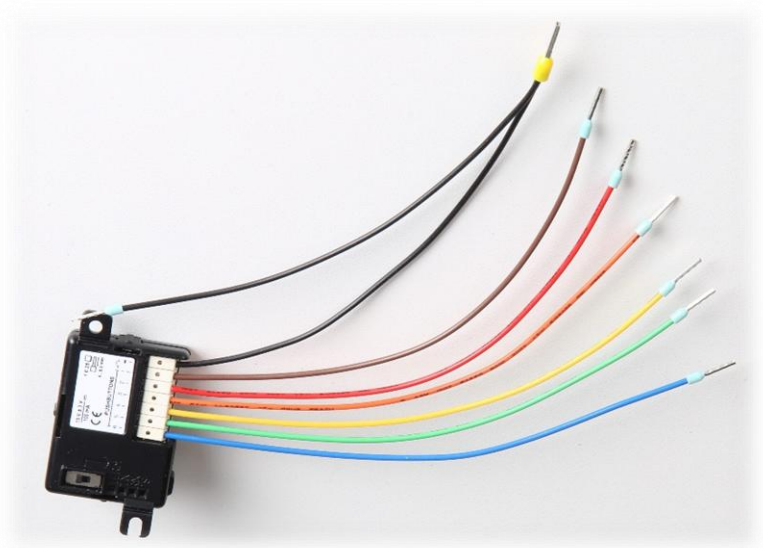

LED 1
LED 2
LED 3
LED 4
LED 5
LED 6
LED common

Brown	Pink
Red	Pink
Orange	Pink
Yellow	Pink
Green	Pink
Blue	Pink
White	Blue



Caution

Once the cables are inserted into the VMB6PB-20, they can only be removed using the WAGO 2059-189 tool.

Attempting to remove them without this tool may damage the connectors.



If the wires are pre-installed, you can simply cut off the wires you don't need.